 


Duo-Fold and Day/Night Shade Operating Instructions

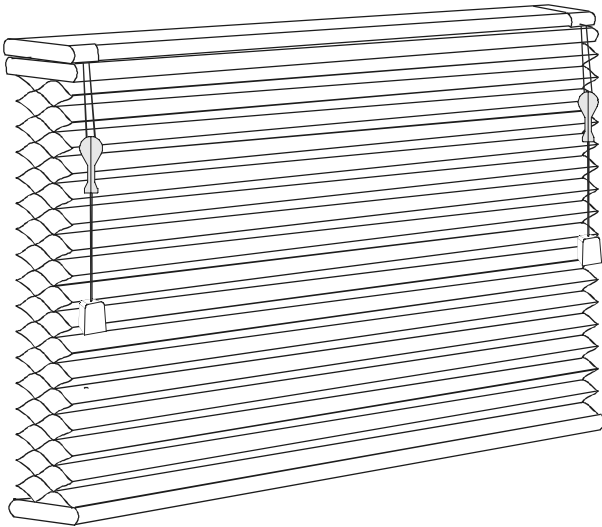


On a standard Duo-Fold or Day/Night shade, the Right Hand Cord operates the Middle Rail, while the Left Hand Cord operates the Bottom Rail.

Cord Lock Operation

To Raise or Lock either the Middle Rail or Bottom rail of the shade, pull the cord straight down and outward toward the edge of the shade.


NOTE: When raising the Middle Rail all of the way to the Head Rail, you should raise the Bottom Rail a couple of inches. This will prevent pinching the Equalizer between the rails.

To lower or release either the Middle Rail or Bottom Rail of the shade, pull the cord inward towards the center of the shade.

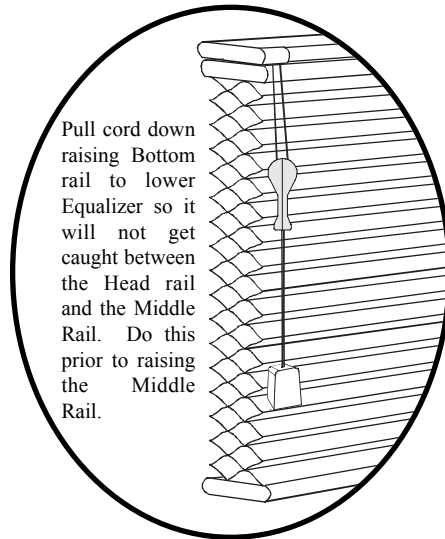

1

If the shade is a Cellular Duo-Fold or EZEQ is used. If the middle moving rail is used, it operates like a normal EZEQ bottom rail shade.

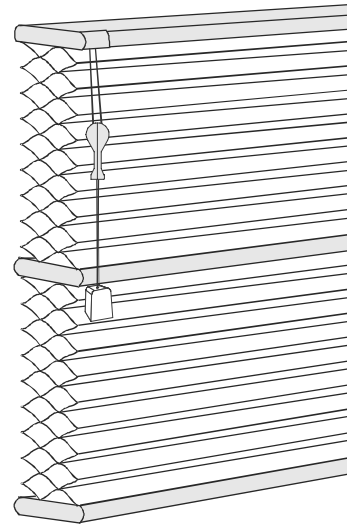

Following The Standard for Safety of Corded Window Products (ANSI/WCMA A100.1-2002), all shades with pleated fabric will have each cord individually tasseled.

Operate the pleated shades the same as any other. Pull on all tassels evenly to raise or lower. If shade is uneven then pull on each cord individually to even out the rail.

152002C

2